





TECHNICAL DATA
SMART SYNC CONTROL

WARRANTY
3 years guarantee

PRODUCT CODE
T-4Z-WALL

@GAPLightingLtd 
GAP Lighting Ltd 
/GAPLightingLtd 
GAP Lighting Ltd 

SMART SYNC



PRODUCT DESCRIPTION

RGBW 4 Zone Touch Controller with smooth dimming function and dynamic multi colour changing programmes. For wall mounting (back box required). Incorporating wireless RF 2.4G technology. Synchronise multiple products simultaneously or control independently up to 30m range.



SOLAS



L-4-RGB-CCT



FLEX-RGBW


To see all compatible products go to www.gaplighting.co.uk

PRODUCT FEATURES

- RF 2.4G remote control for Smart Sync products
- RGBW - colour bar for manual colour selection
- Brightness control bar | 9 dynamic modes
- Speed control buttons for dynamic modes
- Range up to 30m
- Pair any number of Smart Sync luminaires within 30m range (without obstruction) for synchronised control
- Back plate for easy mounting / removal

PRODUCT DATA

Model	T-4Z-WALL
Control	4 zone RGBW remote with touch dimming control
Function	Dimming speed variation dynamic colour changing modes single colour settings master control function
Frequency	2.4GHz high frequency wireless
Remote distance	up to 30 metres
Dimensions	L 80mm W 80mm D 39mm
Material	Glass surface Plastic housing
Working temp.	-20 to + 60°C
Power	100-240vAC Standby <0.1w
Approvals	CE ROHS

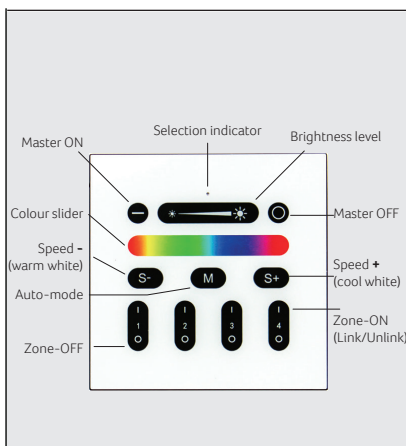

Sync: Switch on via the mains switch. Within 3 seconds, select a Zone-ON button and hold down. Pairing is confirmed when the fitting flashes green. If it does not flash green, try the procedure again.

Unsync: Switch on via the mains switch. Within 3 seconds, select the Zone-ON button that relates to the zone you wish to unsync and hold down. Unsyncing is confirmed when the fitting flashes red. If it does not flash red, try the procedure again.

You can go through the different dynamic modes by pressing 'M' and adjust the speed by pressing 'S+/S-'. Hold the Zone-ON button to select the colour white. Select 'S+/S-' to saturate the solid colours when using the colour wheel. If you are using RGB+CCT products press the Zone-ON button to select the colour white then use the 'S+/S-' to change the colour temperature.